



#### **Current to RS485 Converter DAT 3015-I**

#### **FEATURES**

- Modbus Server device on RS-485
- Modbus RTU/ Modbus ASCII protocol
- 4 input channels up to ± 20 mA
- Watch-Dog Alarm
- Remotely Configurable
- 2000 Vac 3-ways Galvanic Isolation
- LED of signalling on front side for power supply and communication
- Connection by removable screw terminals
- High accuracy
- CE / UL / UKCA mark
- DIN rail mounting in compliance with EN-50022



GENERAL DESCRIPTION
The device DAT 3015-I is able to acquire up to 4 analogue input signals. The data are transmitted with MODBUS RTU/MODBUS ASCII protocol on the The device guarantees high accuracy and stable measure versus time and temperature.

To ensure the plant safety, it is provided a Watch-Dog timer alarm.

The isolation between the parts of circuit removes eventual ground-loop effects, allowing the use of the device even in the heavy environmental conditions.

The device is in compliance with the Directive UL 61010-1 for US market and with the Directive CSA C22.2 No 61010-1 for the Canadian market.

It is housed in a rough self-extinguishing plastic container which, thanks to its thin profile of 17.5mm only, allows a high density mounting on EN-50022 standard DIN rail.

### **USER INSTRUCTIONS**

Before to install the device, please read the "Installation Instruction" section.

If the module configuration is unknown, with device powered off, connect the INIT terminal to the GND terminal (ground), at the next power on the device will be auto-configured in the default settings (refer to the User Guide of the device).

Connect power supply, serial bus and analogue inputs as shown in the "Wiring" section.

The "PWR" LED state depends on the working condition of the device: see the "Light Signalling" section to verify the device working state.

To perform configuration and calibration operations, read the instructions in the User Guide of the device.

To simplify handling or replacing of the device, it is possible to remove the wired terminals even with the device powered.

### TECHNICAL SPECIFICATIONS (Typical @ 25 °C and in the nominal conditions)

INPUT		SERIAL OUTPUT		GENERAL SPECIFICATIONS		
Input Type	Min	Max	Data Transmission		Power supply voltage Reverse polarity prot	
Current 20 mA	-20 mA	+20mA	RS-485 asynchronous serial  Baud Rate	20 4 Khno	Max. Current consu	
Input Accuracy (1 Current	± 20 uA		Max. distance	38.4 Kbps 1.2 Km – 4000 ft	<b>ISOLATION</b> Among all the ways	2000 Vac, 50 Hz, 1 min
Linearity (1) Current	± 0.1 % f.s.				ENVIRONMENTAL Operative temperature UL Operative Tempe Storage temperature	re -10°C +60°C rature -10°C +40°C
Current	<= 22 Ω				Humidity (not conder Maximum Altitude Installation	
Thermal drift (1) Full scale	± 0.005 % / °C				Category of Installati Pollution Degree	on II 2
Sample time	0.5	÷1 sec.			MECHANICAL SPEC Material IP Code Wiring Tightening Torque Mounting Weight	CIFICATIONS Self-extinguish plastic IP20 wires with diameter 0.8+2.1 mm² AWG 14-18 0.5 N m in compliance with DIN rail standard EN-50022 about 150 g.
(1) Referred to input Spar	n (difference between m	ax. and min. values)			CERTIFICATIONS EMC ( for the Indus Immunity Emission UKCA (ref S.I. 2016 Immunity Emission UL US Standard Canadian Standard CCN Typology Classification File Number	trial Environments ) EN 61000-6-2 EN 61000-6-4 N°1091 ) BS EN 61000-6-2 BS EN 61000-6-4 UL 61010-1 CSA C22.2 No 61010-1 NRAQ/NRAQ7 Open Type device Industrial Control Equipment E352854


# **INSTALLATION INSTRUCTIONS**

The device is suitable for fitting to DIN rails in the vertical position. For optimum operation and long life follow these instructions: When the devices are installed side by side it may be necessary to separate them by at least 5 mm if panel temperature exceeds 45°C and at least one of the overload conditions exist. Make sure that sufficient air flow is provided for the device avoiding to place raceways or other objects which could obstruct the ventilation slits. Moreover it is suggested to avoid that devices are mounted above appliances generating heat; their ideal place should be in the lower part of the panel. Install the device in a place without vibrations. Moreover it is suggested to avoid routing conductors near power signal

# **CABLING**


for connecting signals.

cables (motors, induction ovens, inverters etc...) and to use shielded cable

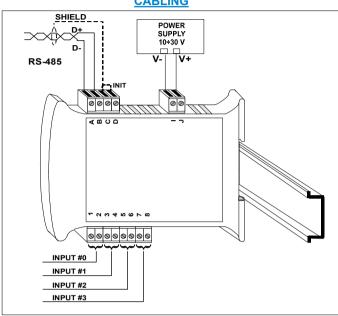


# **LIGHT SIGNALLING**

LED	COLOR	STATE	DESCRIPTION
PWR	GREEN	ON	Device powered
		OFF	Device not powered / Wrong RS-485 cabling.
		FAST BLINKING	Communication in progress (the blinking frequency depends to baud-rate)
		1 second BLINKING	Watch-Dog Alarm condition



# MECHANICAL DIMENSIONS (mm)

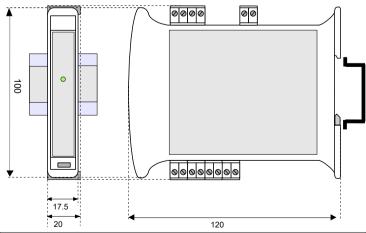




The symbol reported on the product indicates that the product itself must not be

It must be brought to the authorized recycle plant for the recycling of electrical and

For more information contact the proper office in the user's city , the service for the waste treatment or the supplier from which the product has been purchased.

## **WIRING**

# **POWER SUPPLY (\*)** 10÷30 Vdc



RS-232

**GND** 

(\*) Note: for UL installation the device must be powered using a power supply unit classified NEC class 2 or SELV with limited

#### **ANALOG INPUTS**

