


Dual Channel Thermocouple Converter

Phone: +1 561 779 5660 E-mail: Info@datexel.com - Web Site www.datexel.com

FFATURES

- Configurable input for TC and mV
- Configurable output in current or voltage
- Double channel in the same enclosure
- Configurable by dip-switch or PC
- High accuracy
- On-field reconfigurable
- Galvanic isolation among the ways
- UL / CE mark
- Suitable for DIN rail mounting in compliance with EN-50022 and EN-50035

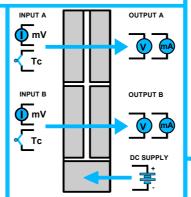

Double channel, isolated converter for Tc and mV configurable by Dip-Switch or PC **DAT 4532 A**











GENERAL DESCRIPTION

The isolated converter DAT 4532 A is able to measure and linearise the standard thermocouples with internal or external cold junction compensation. In function of programming, the measured values are converted in a current or voltage signal. The device guarantees high accuracy and performances stability both versus time and temperature.

The double channel allows the high density mounting where is necessary to reduce the encumbrances.

The programming is made by the dip-switch located in the window on the side of the enclosure. By means of dip-switches it is possible to select the input type and range and the output type without recalibrate the device.

By Personal Computer the user can program all of the device's parameters for his own necessity; the configuration by PC allows to program the two channels with two independent settings. For Thermocouple sensors it is possible to set the Cold Junction Compensation (CJC) as internal or external. Moreover it is available the option of alarm for signal interruption (burn-out) that allows to set the output value as high or low out of scale.

The 1500 Vac galvanic isolation on all ways (inputs, outputs and power supply) eliminates the effects of all ground loops eventually existing and allows the use of the converter in heavy environmental conditions found in industrial applications.

The DAT 4532 A is in compliance with the Directive UL 61010-1 for US market and with the Directive CSA C22.2 No 61010-1 for the Canadian market. It is housed in a plastic enclosure of 12.5 mm thickness suitable for DIN rail mounting in compliance with EN-50022 and EN-50035 standards.

USER INSTRUCTIONS


The connections must be made as shown in the section "Connections".

It is possible to configure the converter on field by dip-switch or Personal Computer as shown in the section " Programming ". The configuration by dipswitches can be made also if the device is powered (note: after the configuration the device takes some seconds to provide the right output measure).

TECHNICAL SPECIFICATIONS (Typical at 25 °C and in nominal conditions)


INPUT (2 CHANNELS)				OUTPUT (2 CHANNELS)				POWER SUPPLY		
Input type	Min	Max	Min.Span	Output type	Min	Max	Min Span	Power supply voltage	18 30 Vdc	
TC (CJC int./ext.) J K S	-200°C -200°C 0°C	1200°C 1300°C 1750°C	100°C 100°C 400°C	Current 0 mA 20 mA 4 mA Current Voltage 0 V 10 V 1 V Current		Reverse polarity protect Current consumption Current output Voltage output				
R B E	0°C 0°C -200°C	1750°C 1850°C 1000°C	400°C 400°C 100°C	Output resolution Current Voltage		7 uA 4 mV		ISOLATION Among all the ways	1500 Vac, 50 Hz, 1 min	
T N Voltage mV	-200°C -200°C -100 mV	400°C 1300°C	100°C 100°C 5 mV	Burn-out values Max. output value 22 mA or 10.6 V Min. output value 0 mA or -0.6 V Output load Resistance - Rload Current output < 500 Ω		ENVIRONMENTAL CONDITIONS Operative Temperature -20°C +60°C UL Operative Temperature -10°C +60°C				
mV mV Accuracy (1)	-100 mV	+200 mV +800 mV	10 mV			Storage Temperature Humidity (not condense Maximum Altitude Installation	-40°C +85°C ed) 0 90 % 2000 m Indoor			
	7, TC the higher of \pm 0.1% f.s. and \pm 12 uV			Short circuit current 26 mA max.			ax.	Category of installation II Pollution Degree 2		
TC ± 0.2 % f.s. mV ± 0.1 % f.s. Input impedance TC, mV >= 10 MΩ Line resistance influence (1) TC, mV <=0.8 uV/Ohm Thermal drift (1) Full scale ± 0.01% / °C			Response time (1	0÷ 90%)	about 500) ms	MECHANICAL SPECIF Material S IP Code IF Wiring w 0 Tightening Torque 0 Mounting ir			
CJC comp.	± 0.01% ± 0.5°C						a	and EN-50035 about 90 g.		
(1)referred to the input Span (difference between max. and min.)							Emission UL US Standard Canadian Standard CCN Typology Classification	nvironments) EN 61000-6-2 EN 61000-6-4 UL 61010-1 CSA C22.2 No 61010-1 NRAQ/NRAQ7 Open Type device Industrial Control Equipment E352854		

CONFIGURATION BY DIP-SWITCHES

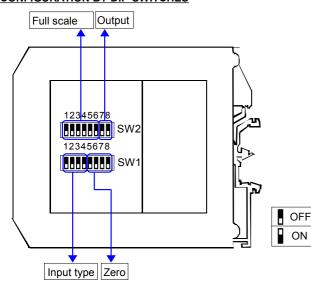

PROGRAMMING

- 1) Open the suitable door on the side of the device.
- 2) Set the input type by the dip-switch SW1 [1..4] (see TAB.1)
- 3) Set the minimum input scale value (Zero) by the dip-switch SW1 [5..8] (see TAB.3)
- 4) Set the maximum input value (Full scale) by the dip-switch SW2 [1..6] (see TAB.3)
- 5) Set the output type by the dip-switch SW2 [7..8] (see TAB.2)

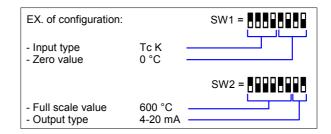

NOTE:


- It is also possible to set the dip-switches using the wizard of the configuration software following the procedure described in the section "Configuration by PC" until the step 6 and clicking on "Switch".

DIP-SWITCH CONFIGURATION TABLES

TAB.1 Input type setting

input typ	e setting			Ou
SW1		SW1		SW
1234		1234		7
	EPROM *		Tc K	
	90 mV		Tc R	
	200 mV		Tc S	
	800 mV		Tc T	
			Тс В	
			Tc E	
			Tc N	
	Tc J			
				ı

TAB.2 Output setting

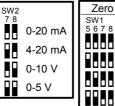

TAB.3 - Input scale setting

٦	Zero		Full Sca	le						
ı	SW1 5 6 7 8		SW2 1 2 3 4 5 6		SW2 1 2 3 4 5 6		SW2 1 2 3 4 5 6		SW2 1 2 3 4 5 6	
ı		Default		Default		75		225		700
ı		-200		0		80		250		750
ı		-100		5		85		255		800
J		-80		10		90		275		850
		-60		15		95		300		900
		-50		20		100		325		950
		-40		25		110		350		1000
		-30		30		120		375		1100
		-20		35		130		400		1200
		-10		40		140		425		1300
		0		45		150		450		1400
		10		50		160		475		1500
		20		55		170		500		1600
		50		60		180		550		1750
		100		65		190		600		1800
		150		70		200		650		1850

NOTES:

- * If the dip-switches SW1 [1..4] are all set in the position 0 ("EPROM"), the device will follow the configuration programmed by PC (input type and range, output type and range and options).
- * For all the "Tc" type selected by dip-switches, the cold junction compensation is internal.
- * If the dip-switches SW1 [5..8] are all set in the position 0 ("Default"), the device will follow the input scale programmed by PC for the input type selected by the dip-switches SW1 [1..4]
- * Eventual wrong dip-switches settings will be signalled by the blinking of the led "PWR".

CONFIGURATION BY PC

Notice: before to execute the next operations, check that the drivers of the cable CVPROG in use have been previously

installed in the Personal Computer.


By software DATESOFT from version 2.7 it is possible to:

- set the default programming of the device;
- program the options not available with the dip-switch; (burn-out level, CJC offset, trip alarm settings, delay on output, etc...);
- read, in real time, the input and output measures;
- follow the dip-switches configuration wizard.

To configure the device follow the next steps:

- 1) Open the protection plastic label on the front of the device.
- 2) Connect the two plugs of cable CVPROG to the Personal Computer (USB plug) and to the device (uUSB plug)
- 3) Run the software DATESOFT
- 4) Select the COM port in use and click on "Open COM".
- 5) Click on the icon "Program".
- 6) Set the programming data.
- 7) Click on the icon "Write" to send the programming data to the device.

For information about DATESOFT refer to the software's user guide.

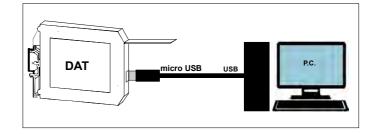

INSTALLATION INSTRUCTIONS

The device is suitable for fitting to DIN rails in the vertical position. For optimum operation and long life follow these instructions:

When the devices are installed side by side it may be necessary to separate them by at least 5 mm in the following cases:


- If panel temperature exceeds 45°C
- Use of high power supply value (> 27 Vdc).
- Use of output current.

Make sure that sufficient air flow is provided for the device avoiding to place raceways or other objects which could obstruct the ventilation slits. Moreover it is suggested to avoid that devices are mounted above appliances generating heat; their ideal place should be in the lower part of the panel.


Install the device in a place without vibrations.

Moreover it is suggested to avoid routing conductors near power signal cables (motors, induction ovens, inverters etc...) and to use shielded cable for connecting signals.


ISOLATION STRUCTURE

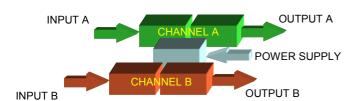

CONNECTIONS

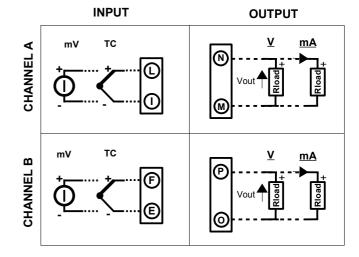

POWER SUPPLY(*)

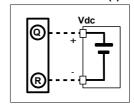


(*) Note: for UL installation the device must be powered using a power supply unit classified NEC class 2 or SELV

LIGHT SIGNALLING

LED	COLOUR	STATE	DESCRIPTION		
PWR	GREEN	ON	Device powered		
		OFF	Device not powered		
		BLINKING	Wrong dip-switches setting		


DIMENSIONS (mm)

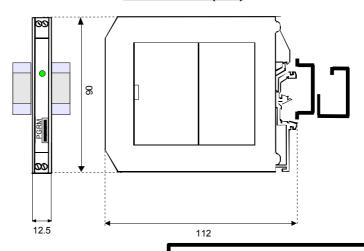

HOW TO ORDER

The device is provided as requested on the Customer's order. Refer to the section "Programming" to determine the input and output ranges. In case of the configuration is not specified, the parameters must be set by the user.

ORDER CODE EXAMPLE:

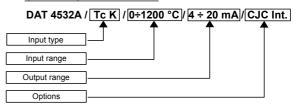



The symbol reported on the product indicates that the product itself must not be considered as a domestic waste.

considered as a domestic waste.

It must be brought to the authorized recycle plant for the recycling of electrical and electronic waste.

For more information contact the proper office in the user's city, the service for the waste treatment or the supplier from which the product has been purchased.