

## Modbus RTU to Isolated Analog Output Module

## **FEATURES**

- Modbus Server device on RS-485
- Modbus RTU/ Modbus ASCII protocol
- 4 isolated output channels
- Outputs configurable as Voltage or Current
- Watch-Dog Alarm
- Remotely Configurable
- 1500 Vac 3-ways Galvanic Isolation
- LED of signalling on front side for power supply and communication
- Connection by removable screw terminals
- High accuracy
- CE / UKCA mark

- DIN rail mounting in compliance with EN-50022

# GENERAL DESCRIPTION

**DAT 3024-ISO** 

The device DAT3024-ISO generates 4 output analog signals from digital commands.The data are transmitted with MODBUS RTU/MODBUS ASCII protocol on the RS-485 network. To ensure the plant safety, one Watch-Dog timer alarm is provided. The output channels are configurable independently. For each channel it is possible to: set type and output value; preset of the value at the power up (Power-up) separated for output voltage and current; preset of safety value (Safe) separated for output voltage and current.

It is possible to generate voltage signals up to 10V and current signals up to 20mA, both active or passive loops. The device guarantees high accuracy and stable measure versus time and temperature. The isolation between the parts of circuit removes eventual ground-loop effects, allowing the use of the device even in the heavy environmental conditions. The device is housed in a rough self-extinguishing plastic container which, thanks to its thin profile of 17.5mm only, allows a high density mounting on EN-50022 standard DIN rail.

### USER INSTRUCTIONS

Before to install the device, please read the "Installation Instruction" section.

If the module configuration is unknown, with device powered off, connect the INIT terminal to the GND terminal (ground), at the next power on the device will be auto-configured in the default settings (refer to the User Guide of the device).

Connect power supply, serial bus and analogue outputs as shown in the "Wiring" section.

The "PWR" LED state depends on the working condition of the device: see the "Light Signalling" section to verify the device working state.

To perform configuration and calibration operations, read the instructions in the User Guide of the device.

To simplify handling or replacing of the device, it is possible to remove the wired terminals even with the device powered.

### TECHNICAL SPECIFICATIONS (Typical @ 25 °C and in the nominal conditions)

OUTPUT (4 CHANNELS)			SERIAL OUTPUT		GENERAL SPECIFICATIONS		
Output Type	Min	Max	Data Transmission		Power supply voltage Reverse polarity prot		
<b>Current</b> mA	0 mA	+ 20 mA	RS-485 asynchronous serial Baud Rate	115.2 Kbps	Max. Current consu		
<b>Voltage</b> Volt	0 V	+ 10 V	Max. distance		ISOLATION Among all the ways	1500 Vac, 50 Hz, 1 min	
Output Accuracy			-		ENVIRONMENTAL CONDITIONS Operative temperature -20°C +60°C		
Current Voltage	± 10 uA ± 5 mV				Storage temperature Humidity (not conder Maximum Altitude	densing) 0 90 %	
Thermal driftFull scale± 0.01 % / °C					Installation Category of Installati Pollution Degree	Indoor	
Load resistance					MECHANICAL SPE		
Voltage Current	≥ 5 KΩ ≤ 500 Ω	1			Material IP Code	Self-extinguish plastic IP20	
Auxiliary Voltage (4 channels) ≥ 13Vdc @ 20mA					Wiring	wires with diameter 0.8÷2.1 mm <sup>2</sup> AWG 14-18	
Response time (from 10 % to 90 % ) 15 ms					Tightening Torque Mounting	0.5 N m in compliance with DIN rail standard EN-50022	
Command Response Time (*) 10 ms					Weight	about 150 g.	
10 113				Immunity Emission <b>UKCA (ref S.I. 2016</b> Immunity	BS EN 61000-6-2		
					Emission	BS EN 61000-6-4	
(*) It is the time that el request and the begin							


## **INSTALLATION INSTRUCTIONS**

The device is suitable for fitting to DIN rails in the vertical position. For an optimum operation and long life follow these instructions:

When the devices are installed side by side it may be necessary to separate them by at least 5 mm if panel temperature exceeds 45°C and at least one of the overload conditions exist or if panel temperature exceeds 35°C and at least two of the overload conditions exist. The overload conditions are the following:

- High supply voltage: >27Vdc

 Use of the auxiliary power supply
Make sure that sufficient air flow is provided for the device avoiding to place raceways or other objects which could obstruct the ventilation slits. Moreover it is suggested to avoid that devices are mounted above appliances generating heat; their ideal place should be in the lower part of the panel. Install the device in a place without vibrations. Moreover it is suggested to avoid routing conductors near power signal cables (motors, induction ovens, inverters etc...) and to use shielded cable for connecting signals.

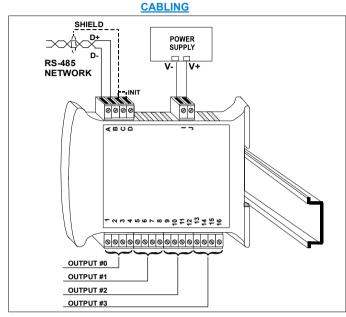


#### LIGHT SIGNALLING

LED	COLOR	STATE	DESCRIPTION	
PWR	GREEN	ON	Device powered	
		OFF	Device not powered / Wrong RS-485 cabling.	
		FAST BLINKING	Communication in progress (the blinking frequency depends to baud-rate)	
		1 second BLINKING	Watch-Dog Alarm condition	


#### **ISOLATION STRUCTURE**




#### MECHANICAL DIMENSIONS (mm)

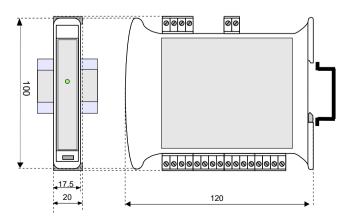


The symbol reported on the product indicates that the product itself must not be considered as a domestic waste. It must be brought to the authorized recycle plant for the recycling of electrical and electronic waste. For more information contact the proper office in the user's city , the service for the waste treatment or the supplier from which the product has been purchased.

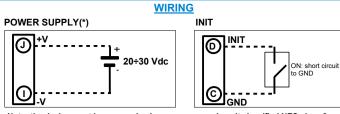

Note: the device must be powered using a power supply unit classified NEC class 2 or SELV with limited energy

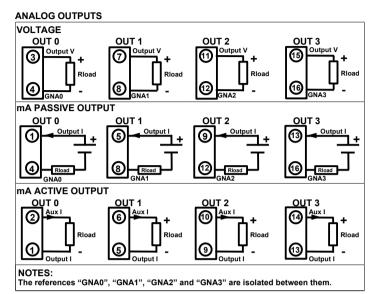

RS-485

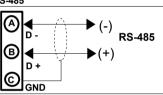

## **MODBUS REGISTERS MAPPING**

Register Position	Description	Access
40002	Firmware [0]	RO
40003	Firmware [1]	RO
40004	Name [0]	R/W
40005	Name [1]	R/W
40006	Baud-Rate	R/W
40007	Node ID	R/W
40008	Delay TX/RX	R/W
40009	Watchdog timer	R/W
40010	System Flags	R/W
40014	Outputs type	R/W
40015	Analog Output (0)	R/W
40016	Analog Output (1)	R/W
40017	Analog Output (2)	R/W
40018	Analog Output (3)	R/W
40023	Power Up Current (0)	R/W
40024	Power Up Current (1)	R/W
40025	Power Up Current (2)	R/W
40026	Power Up Current (3)	R/W
40031	Power Up Voltage (0)	R/W
40032	Power Up Voltage (1)	R/W
40033	Power Up Voltage (2)	R/W
40034	Power Up Voltage (3)	R/W
40039	Safe Current (0)	R/W
40040	Safe Current (1)	R/W
40041	Safe Current (2)	R/W
40042	Safe Current (3)	R/W
40047	Safe Voltage (0)	R/W
40048	Safe Voltage (1)	R/W
40049	Safe Voltage (2)	R/W
40050	Safe Voltage (3)	R/W

#### <u>HOW TO ORDER</u>

The device can be supplied with the configuration specified by the customer. ORDER CODE: DAT 3024-ISO