# DATEXE



Isolated programmable converter for Strain Gauge / Bridge sensors

## **FEATURES**

- Input for Strain Gauge

Strain Gauge Converter

- Input range configurable from 0+10 mV up to 0+200 mV or from ± 5 mV up to ± 200 mV
- Accurate bridge excitation voltage at 3.6 and 10 Vdc with current limiter

Phone: +1 561 779 5660 E-mail : Info@datexel.com - Web Site www.datexel.com

- Isolated power supply source for passive loads on output
- Input and output ranges configurable by DIP-switches
- Galvanic isolation at 2000 Vac between input, power supply and output
- Good accuracy and performance stability
- EMC compliant CE mark
- DIN rail mounting in compliance with EN-50022 and EN-50035

## **GENERAL DESCRIPTION**

The converter DAT 5025 is designed to provide on its output a voltage or current signal linear and proportional with the output voltage coming from the output of a bridge transducers applied on its input.

The user can program the bridge excitation voltage value, the input and the output ranges by the proper DIP-switches available after opening the suitable door located on the side of device (see "Input ranges table" and "Output ranges table" sections).

The regulation of Zero and Span values is made by the ZERO and SPAN potentiometers located on the top of device.

The 2000 Vac isolation between input, power supply and output eliminates the effects of all ground loops eventually existing and allows the use of the converter in heavy environmental conditions found in industrial applications.

The DAT 5025 provides on the output side an auxiliary supply source to connect both active and passive loads.

It is housed in a plastic enclosure of 12.5 mm thickness suitable for DIN rail mounting in according to EN-50022 and EN-50035 standards .

#### **OPERATIVE INSTRUCTIONS**

The converter DAT 5025 must be powered by a direct voltage included in the 18 V to 30 V range. The power supply must be applied between the terminals Q (+Vdc) and R (GND1).

The output connections must be made as shown in the section "Output connections".

Voltage output: between the terminals P (Out I) and M (GND2); passive current output: between the terminals P (Out I) and M (GND2) for the sink currents; active current output : between the terminals O (Vaux) and P (Out I) for the source currents.

The input connections must be made as shown in the section "Input connections"

The bridge transducer must be powered between the terminals E (+EXC) and F(-EXC); the bridge's output voltage signal must be connected between the terminals G or H(+ IN) I or L (- IN).

The configuration of the bridge excitation voltage, the input and output ranges values is made by DIP-switches (refer to the section "Input ranges table" and "Output ranges table").

After the converter configuration, it is necessary to calibrate it using the ZERO and SPAN regulations; this operation is illustrated in the section "DAT 5025: Configuration and calibration". To install the device refer to the section "Installation instructions"

TECHNICAL SPECIFICATIONS (Typical @ 25 °C and in nominal conditions)		
Input		
Sensor type	Strain Gauge	
Input signal(configurable)	From 0+10 mV up to 0+200 mV and from ± 5 mV up to ± 200 mV	
Bridge excitation voltage (Vexc)	3.60 Vdc ± 0.1% ( with bridge's resistance included between 100 $\Omega$ and 10K $\Omega$ )	
	10 Vdc ± 0.1% ( with bridge's resistance included between 300 $\Omega$ and 10 K $\Omega$ )	
Thermal Drift	± 0.01 % of the selected value/°C	
Bridge excitation current	65 mA max.	
Output		
Signal type (configurable)	Current: 4 ÷ 20 mA, 0 ÷ 20 mA,	
	Voltage: 0+10 V, 2+10 V, 0+5 V, 1+5 V	
Zero regulation	± 40 % max.	
Span regulation	± 40 % max.	
Load resistance (Rload)	Current output: $\leq$ 500 $\Omega$ , Voltage output: $\geq$ 5 K $\Omega$	
Auxiliary supply (Vaux)	12 Vdc min @ 20 mA	
Performances		
Calibration error	± 0.1 % of f.s.	
Linearity error (*)	± 0.1 % of f.s.	
Thermal drift	0.01 % of f.s./°C	
Response time (from 10 to 90 % of f.s.)	40 ms	
Power supply voltage (**)	18÷30 Vdc	
Current consumption(***)	Current output: 120 mA max.	
	Voltage output: 80 mA max.	
Electromagnetic Compatibility (EMC)		
( for industrial environment )	Immunity: EN 61000-6-2; Emission : EN 61000-6-4	
Isolation voltage	2000 Vac, 50 Hz, 1 min.	
Operating temperature	-20 ÷ 60 °C	
Storage temperature	- 40 ÷ 85 °C	
Relative humidity (non cond.)	0÷90%	
Maximum Altitude	2000 m	
Installation	Indoor	
Category of installation		
Pollution Degree	2	
Weight	approx. 90 g	
Mechanical Specifications Material	Solf ortinguish plastic	
IP Code	Self-extinguish plastic IP20	
Wiring	wires with diameter 0.8÷2.1 mm <sup>2</sup> /AWG 14-18	
Tightening Torque	0.8 N m	
Mounting	in compliance with DIN rail standard EN-50022 and EN-50035	
5	in compliance with Dirivital Standard EN-50022 and EN-50055	
<ul> <li>*) inclusive of hysteresis and power supply variation.</li> <li>**) internally protected against polarity reversion.</li> </ul>		
***)Current: with Auxiliary supply operative.		



#### DAT 5025: CONFIGURATION & CALIBRATION

1) Refer to the "Input ranges table", determine in the column " Input " the position of the input value.

Refer to the "Output ranges table " and determine in the column " Output " the position of the output value.

In the correspondent lines is shown how to set the DIP-switches .

2) Set the DIP-switches as indicated

3) Set the minimum value of the input range .


4) By the ZERO potentiometer calibrate the output at the minimum value . 5) Set the maximum value of the input range .

6) By the SPAN potentiometer calibrate the output at the maximum value . 7) Repeat the operation from the step 4 to the step 7 until the output value


will be correct (3 attempts typically required).

<u>Configuration ex.</u>: in: 0÷10 mV, Vexc = 10 Vdc, out 0÷10 Vdc Input switches configuration (SW1): On, On, On, On, Off, Off(\*). Output switches configuration (SW2): Off, Off, Off, On

(\*) = switch for the configuration of the Bridge excitation voltage value . **INPUT RANGES TABLE** 

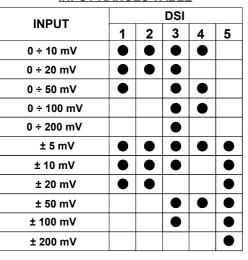

## **OUTPUT RANGE TABLE**

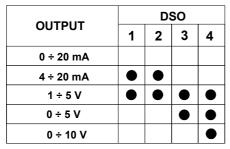

# **EXCITATION VOLTAGE RANGE TABLE**

BRIDGE VOLT.	DSI
(Vexc)	6
3.60 Vcc	
10 Vcc	

= DIP SWITCHES " ON"

#### **INSTALLATION INSTRUCTIONS**

The DAT 5025 device is suitable for fitting to DIN rails in the vertical position. For optimum operation and long life follow these instructions:

#### When the devices are installed side by side it may be necessary to separate them by at least 5 mm in the following case:

- If panel temperature exceeds 45°C and at least one of the overload conditions exists.

- If panel temperature exceeds 35°C and both the overload conditions exist

#### **Overload conditions:**


- Use of the current output (terminal P).

- Use of output auxiliary supply (terminal O)

Make sure that sufficient air flow is provided for the device avoiding to place raceways or other objects which could obstruct the ventilation slits. Moreover it is suggested to avoid that devices are mounted above appliances generating heat; their ideal place should be in the lower part of the panel. Install the device in a place without vibrations.


Moreover it is suggested to avoid routing conductors near power signal cables (motors, induction ovens, inverters, etc...) and to use shielded cable for connecting signals.






Power supply side DAT 5025: CONNECTIONS

INPUT CONNECTIONS

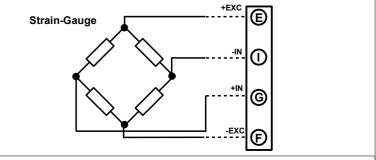


Note: internal connection between terminals I = L and G = H


# POWER SUPPLY CONNECTIONS



## **OUTPUT CONNECTIONS**




# **DIMENSIONS (mm) & REGULATIONS**

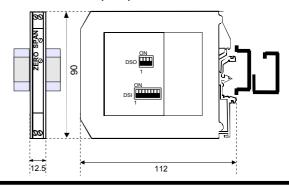

## HOW TO ORDER

The DAT 5025 is supplied as requested on the order. In case of the configuration is not specified, the parameters must be set by the user.

ORDER CODE EXAMPLE: DAT 5025	-10 mV - 0÷1	<u>0 V</u> - <u>10 v</u>	/dc
Input range ——			
Output range ——			
Bridge exc. value ——			



Datexel s.r.l. reserves its right to modify totally or in part the characteristics of its product without notice at any time