



mV. Volts. Current Transmitter Datexel LLC Phone: 561 779 5660 - e-mail:datexel@datexel.com - www.datexel.com

#### **FEATURES**

- Input for current or voltage signals
- Zero and Span values adjustable by potentiometers
- 4÷20 mA current loop output
- High accuracy
- EMC compliant CE mark
- Suitable for DIN rail mounting in compliance with EN 50022 and EN-50035

## Fixed range transmitter for mV,V and mA signals

# **DAT 207 2W**









#### **GENERAL DESCRIPTION**

The transmitter DAT 207 2W is designed to provide on output a 4÷20 mA current loop signal proportional with the variation of the normalised current or voltage signal applied to its input.

In function of the input signal requested in phase of order, are available two versions of the transmitter:

DAT 207A 2 W to measure voltage signals included between 0 ÷ 5 mV and 0 ÷ 200 mV;

DAT 207B 2 W to measure voltage signals included between 0 ÷ 200 mV and 0 ÷ 20 V;

DAT 207C 2 W to measure current signals between 0 ÷ 5 mA and 0 ÷ 50 mA.

The regulation of the zero and full-scale value are made using the ZERO and SPAN potentiometers; there is not influence between the regulations.

It is housed in a plastic enclosure of 17 mm thickness suitable for DIN rail mounting in compliance with EN-50022 and EN-50035 standards.

## **USER INSTRUCTIONS**

The transmitter DAT 207 2W must be powered by a direct voltage between 10 to 32 V applied to the terminals G (+V) and H (-V).

The 4÷20 mA output signal is measurable in the power loop as shown in the section "Power supply /Output connections"; Rload is the input impedance of instruments on the current loop; to obtain a correct measure, the value of Rload will be calculated as function of the power supply value ( see section " Load characteristic").

The input connections must be made as shown in the section "Input connections".

The input signal in voltage or current, must be applied between the terminals C (IN+) and A (IN-).

The calibration of the device must be made by the ZERO (calibration of the zero value) and SPAN (calibration of the full-scale value) regulations. Such operation can be made on field referring to the section "DAT 207 2W: CALIBRATION".

To install the transmitter refer to section "Installation Instructions".

TECHNICAL	. SPECIFICATIONS (	Typical (	@ 25 °C an	d in nomina	l conditions)

Input

Voltage: from 0 ÷ 5 mV up to 0 ÷ 200 mV (DAT207A 2W), Input type from 0 ÷ 200 mV up to 0 ÷ 20 V (DAT207B 2W)

Current: from 0 ÷ 5 mA up to 0 ÷ 50 mA (DAT207C 2W).

Input impedance Voltage signals: 1 M $\Omega$ ;

Current signals:  $100 \Omega$ .

Output

Output type 4 ÷ 20 mA on current loop

Maximum output signal 25 mA

Load resistance (Rload) see section "Load characteristic"

**Performances** 

Calibration error ± 0.1 % of f.s. Linearity error (\*) ± 0.1 % of f.s. 0.02 % of f.s./°C Thermal drift Response time (from 10 to 90 % of f.s.) 500 ms Power supply voltage (\*\*)

Electromagnetic Compatibility (EMC)

(for industrial environment) Operating temperature Storage temperature

Relative humidity (non cond.) Maximum Altitude Installation Category of installation

Weight

Pollution Degree

**Mechanical Specifications** 

Material IP Code Wiring

**Tightening Torque** Mounting

10÷32 Vdc Immunity: EN 61000-6-2; Emission: EN 61000-6-4 -20 ÷ 70 °C - 40 ÷ 85 °C 0 ÷ 90% 2000 m Indoor Ш approx. 50 g

Self-extinguish plastic

IP20

wires with diameter 0.8÷2.1 mm<sup>2</sup> /AWG 14-18

in compliance with DIN rail standard EN-50022 and EN-50035

(\*) inclusive of hysteresis and power supply variation. (\*\*) internally protected against polarity reversion.

#### **INSTALLATION INSTRUCTIONS**

The device DAT 207 2W is suitable for DIN rail mounting.

It is necessary to install the device in a place without vibrations; avoid to routing conductors near power signal cables .

#### **DAT 207 2W: CALIBRATION**

Calibration of the minimum scale value :


By a voltage or current simulator set the minimum input scale value and regulate the value of 4 mA by the ZERO potentiometer.

#### Calibration of the maximum scale value


By a voltage or current simulator set the maximum input scale value and regulate the value of 20 mA by the SPAN potentiometer.

## **DAT 207 2W CONNECTIONS**


#### **INPUT CONNECTIONS**

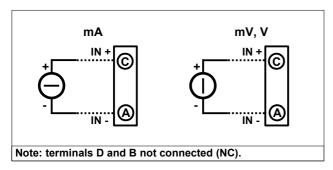


#### POWER SUPPLY/OUTPUT CONNECTIONS

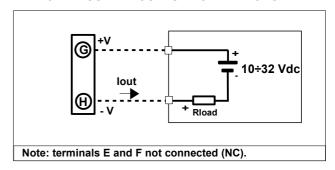

## **DIMENSIONS (mm) & REGULATIONS**

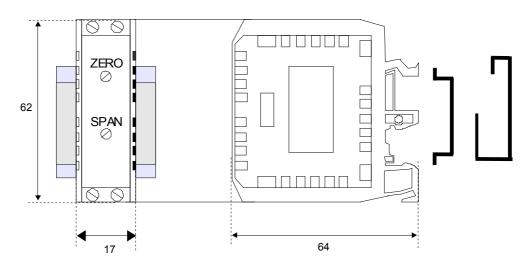

## **LOAD CHARACTERISTIC**

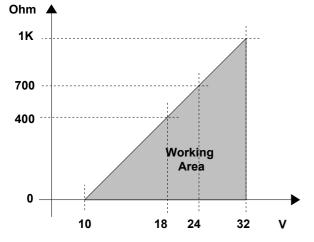

HOW TO ORDER
The DAT 207 2W is supplied as requested from the customer in phase of order.

ORDER CODE: DAT 207 A 2W 0 ÷ 100 mV

Version "A", "B" or "C"

Input range