ΟΔΙΕΧ

Phone: +1 561 779 5660 E-mail : Info@datexel.com Web Site : www.datexel.com

Dual Channel Voltage and Current Converter

FEATURES

- Configurable input for voltage and current
- Configurable output in current or voltage
- Double channel in the same enclosure
- Configurable by dip-switch or PC
- Two independent channels
- High accuracy
- On-field reconfigurable
- Galvanic isolation among the ways
- UL / CE / UKCA mark
- Suitable for DIN rail mounting in compliance with EN-50022 and EN-50035

GENERAL DESCRIPTION

The isolated converter DAT 4532 D is able to measure voltage and current signals. In function of programming, the measured values are converted in a current or voltage signal. The device guarantees high accuracy and performances stability both versus time and temperature.

The double channel allows the high density mounting where is necessary to reduce the encumbrances. The programming is made by the dip-switch located in the window on the side of the enclosure. By means of dip-switches it is possible to select the input

The programming is made by the dip-switch located in the device. Moreover, by Personal Computer the user can program all of the device's parameters for his own necessity. It is possible to configure the two channels with independent settings either with configuration by PC or by dip-switches. <u>The terminals of the current signal on input side must be only connected to active current loop.</u> The 1500 Vac galvanic isolation on all ways (inputs, outputs and power supply) eliminates the effects of all ground loops eventually existing and allows the use of the converter is beaut converted to active current loop. the use of the converter in heavy environmental conditions found in industrial applications.

The DAT 4532 D is in compliance with the Directive UL 61010-1 for US market and with the Directive CSA C22.2 No 61010-1 for the Canadian market. It is housed in a plastic enclosure of 12.5 mm thickness suitable for DIN rail mounting in compliance with EN-50022 and EN-50035 standards.

USER INSTRUCTIONS

The connections must be made as shown in the section "Connections". It is possible to configure the converter on field by dip-switch or Personal Computer as shown in the section " Programming ". The configuration by dip-switches can be made also if the device is powered (note: after the configuration the device takes some seconds to provide the right output measure).

TECHNICAL SPECIFICATIONS (Typical at 25 °C and in nominal conditions)


INPUT (2 CHANNELS)			OUTPUT (2 CHANNELS)				GENERAL SF	PECIFICATIONS	
Input type	Min	Мах		Output type	Min	Max	Span min	Power supply voltage Reverse polarity protect	18 30 Vdc ction 60 Vdc max
Voltage Current	0 V 0 mA	10 V 20 mA	1 V 1 mA	Current	0 mA	20 mA	4 mA	Current consumption	1
	_	-		Voltage	0 V	10 V	1 V	Current output Voltage output	55 mA max. 25 mA max.
Accuracy (1)Voltthe higher of $\pm 0.1\%$ f.s. and ± 2 mVmAthe higher of $\pm 0.1\%$ f.s. and ± 6 uA			Output resolutionCurrent± 7 uAVoltage± 4 mV			ISOLATION Among all the ways	1500 Vac, 50 Hz, 1 min		
Linearity (1)Volt, mA $\pm 0.05 \%$ f.s.Input impedanceVoltage>= 1 M Ω Current<= 50 Ω Thermal drift (1)Full scale $\pm 0.01\%$ / °C		Burn-out values Max. output value $22 \text{ mA or } 10.6 \text{ V}$ Max. output value0 mA or -0.6 VOutput load Resistance - RloadCurrent output< 500 Ω Voltage output> 10 K Ω Short circuit current26 mA max.		ENVIRONMENTAL CO Operative Temperature UL Operative Temperature Humidity (not condens Maximum Altitude Installation Category of installation Pollution Degree	e -20°C +60°C ture -10°C +60°C -40°C +85°C ed) 0 90 % 2000 m Indoor				
				Response time (10÷ 90%)	about 50	0 ms	IP Code I Wiring V Tightening Torque (Mounting i	FICATIONS Self-extinguish plastic P20 vires with diameter).8÷2.1 mm² /AWG 14-18).8 N m n compliance with DIN ail standard EN-50022 and EN-50035 about 90 g.
								CERTIFICATIONS EMC (for the Industria Immunity Emission UKCA (ref S.I. 2016 N° Immunity Emission UL US Standard Canadian Standard CCN Typology Classification	EN 61000-6-2 EN 61000-6-4
(1)referred to the input	Span (differen	ce between r	nax. and min.)					File Number	Equipment E352854





DAT 4532

CONFIGURATION BY DIP-SWITCHES

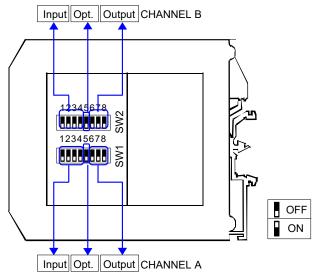

NOTE:

- It is also possible to set the dip-switches using the wizard of the configuration software following the procedure described in the section "Configuration by PC" until the step 6 and clicking on "Switch".

DIP-SWITCH CONFIGURATION TABLES

TAB.1 - Channel A settings

	enamerite	otango		
Inp	out	Output	Options	
SW1 1 2 3 4	Default * 0+20 mA 4+20 mA 0+10 V 2+10 V 0+5 V 1+5 V	6 7 8 6 7 8 0 7 8 0 4+20 mA 0+10 V 2+10 V 0+5 V 1+5 V	Sw1 5 Out: Direct Reverse	

TAB.2 – Channel B settings

PROGRAMMING

-			-	
	Inp	ut	Output	Options
	SW2		SW2	SW2
	1234		678	5 Out:
	0000	Default *	0÷20 mA	Direct
		0÷20 mA	4÷20 mA	Reverse
		4.00 4		-
		4÷20 mA	0÷10 V	
		0÷10 V	2÷10 V	
		2÷10 V	0÷5 V	
		0÷5 V	1÷5 V	
		4.51		
		1÷5 V		

NOTES:

* If the dip-switches SW1 [1..4] and SW2 [1..4] are all set in the position 0 ("Default"), the device will follow the configuration programmed by PC (Input and output type and options).

* Eventual wrong dip-switches settings will be signalled by the blinking of the led "PWR".


CONFIGURATION BY PC

Notice: before to execute the next operations, check that the drivers of the cable CVPROG in use have been previously installed in the Personal Computer. By software DATAPRO it is possible to:

- set the default programming of the device;
- program the options not available with the dip-switch;
- (burn-out level, CJC offset, trip alarm settings, delay on output, etc...);
- read, in real time, the input and output measures;
- follow the dip-switches configuration wizard.

To configure the device follow the next steps:


- 1) Open the protection plastic label on the front of the device.
- 2) Connect the two plugs of cable CVPROG to the Personal Computer
- (USB plug) and to the device (uUSB plug).
- 3) Run the software
- 4) Select the COM port in use and click on "Open COM".
- 5) Select the device and connect to it.
- 6) Set the programming data.
- 7) Click "Write" to send the programming data to the device.
- For information about the software refer to its user guide.

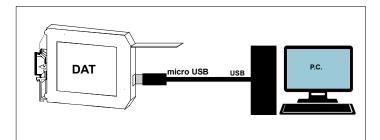

1) Open the suitable door on the side of the device.

Configuration of Channel A (see TAB.1)

- 2) Set the input type by the dip-switch SW1 [1..4]
- 3) Set the output type by the dip-switch SW1 [6..8]
- 4) Set the options by the dip-switch SW1 [5]
- Configuration of Channel B (see TAB.2)
- 2) Set the input type by the dip-switch SW2 [1..4]
- 3) Set the output type by the dip-switch SW2 [6..8]
- 4) Set the options by the dip-switch SW2 [5]

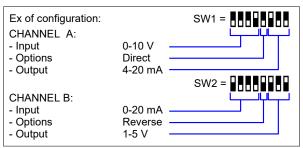

INSTALLATION INSTRUCTIONS

The device is suitable for fitting to DIN rails in the vertical position. For optimum operation and long life follow these instructions:


When the devices are installed side by side it may be necessary to separate them by at least 5 mm in the following cases:


- If panel temperature exceeds 45°C.
- Use of high power supply value (> 27 Vdc).
- Use of output current.

Make sure that sufficient air flow is provided for the device avoiding to place raceways or other objects which could obstruct the ventilation slits. Moreover it is suggested to avoid that devices are mounted above appliances generating heat; their ideal place should be in the lower part of the panel.

Install the device in a place without vibrations.

Moreover it is suggested to avoid routing conductors near power signal cables (motors, induction ovens, inverters etc...) and to use shielded cable for connecting signals.

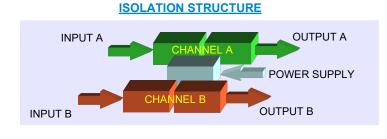


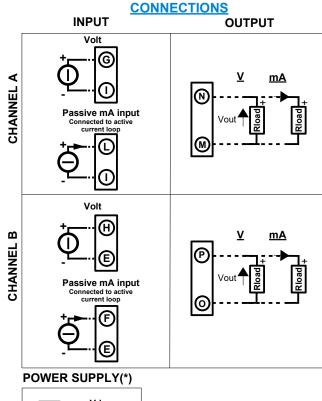

(*) Note: for UL installation the device must be powered using a power supply unit classified NEC class 2 or SELV

LIGHT SIGNALLING

LED	COLOUR	STATE	DESCRIPTION
PWR	GREEN	ON	Device powered
		OFF	Device not powered
		BLINKING	Wrong dip-switches setting

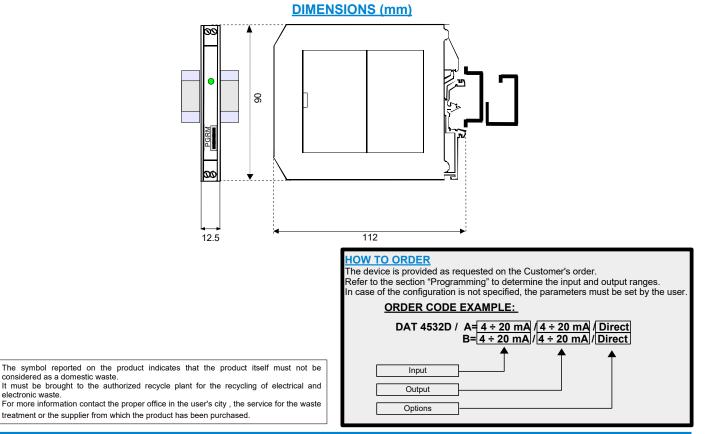

Datexel reserves its rights to modify totally or in part the characteristics of its products without notice at any time .